 


E-1


Cylinder, Cylinder Head & Spark Plug

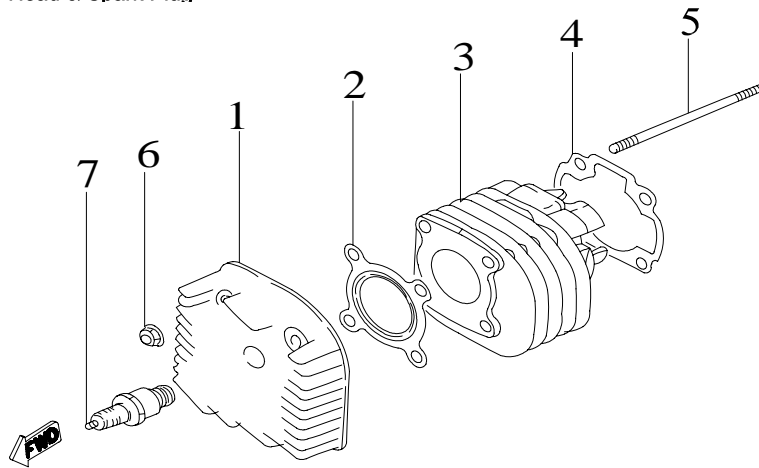

Item	Part No.		Q'ty
1	12210-E05-000	Head Cover , Cylinder	1
2	12251-E04-000	Casket , Cylinder Head	1
3	12100-E05-000	Cylinder	1
4	12191-E01-010	Gasket, Cylinder	1
5	P91000-07124	Bolt, Stud	4
6	P92120-07-10C	Hex.Acorn Washer Face Nut	4
7	98069-1BR8HSA-R	Plug, Spark	1

E-2

 
Piston, Crankshaft

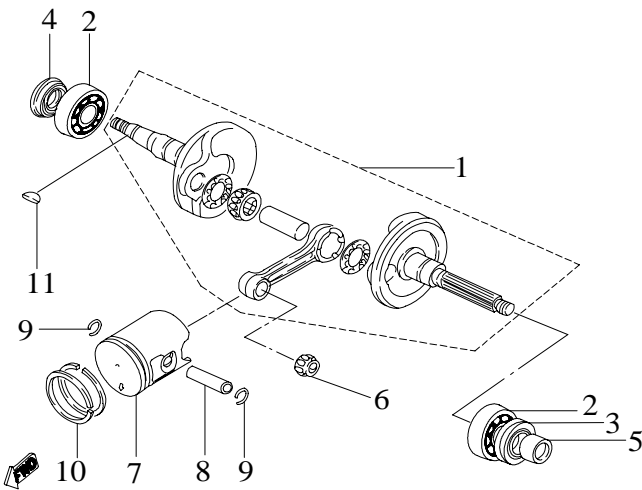

Item	Part No.		Q'ty
1	13000-E03-000	Crankshaft Ass'y	1
2	95100-T6204C3	Ball Bearing, Crankshaft	2
3	96100-204208	Seal, Oil	1
4	96100-203006	Seal, Oil	1
5	13200-E01-000	Collar, L Crankcase	1
6	95200-KBK12	Bearing, Needle	1
7	13300-E05-000	Piston(std.)	1
8	13400-E05-000	Pin, Piston	1
9	13410-E01-100	Clip, Piston Pin	2
10	13310-E05-000	Rings, Piston(std.)	1
11	13010-E01-000	Key, Woodruff	1

E-3

 
Fan :

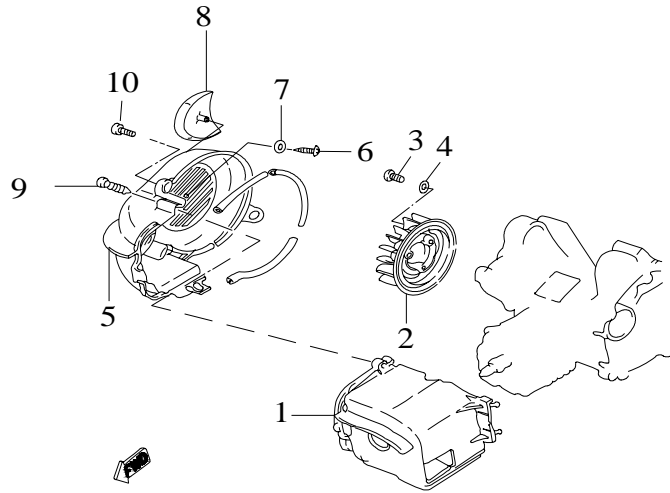

Item	Part No.		Q'ty
1	17100-E04-000	Air Shroud, Cylinder	1
2	18100-E04-000	Fan	1
3	P91760-06016-05W	Hex. Socket Bolt	3
4	P93100-06013-01W	Washer, Plain	3
5	18210-E04-000	Cover, Fan	1
6	P91825-05016	Screw, Tapping	1
7	P93100-06013-01W	Washer, Plain	1
8	18310-E04-000	Cover, Dust Protect	1
9	P91825-06040	Screw, Tapping	1
10	P91760-06020-05W	Hex. Socket Bolt	2

E-4

 
Oil Pump

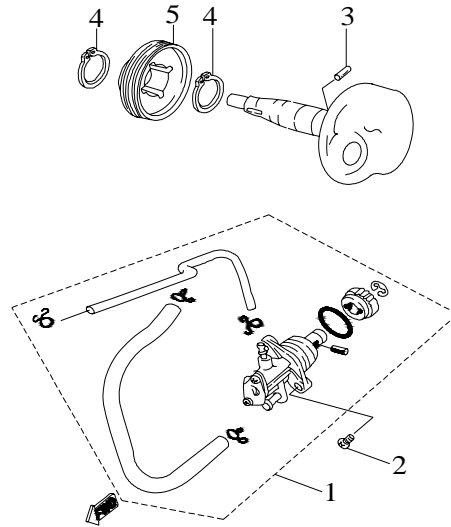


Item	Part No.		Q'ty
1	15100-E01-000	Pump, Oil	1
2	P93700-05016	Bolt, Pan, Crosshead	2
3	94002-031108	Pin	1
4	93406-STW19	Circlip	2
5	15110-E01-000	Drive, Gear, Oil-Pump	1

E-5

 
Air Cleaner, Reed Valve

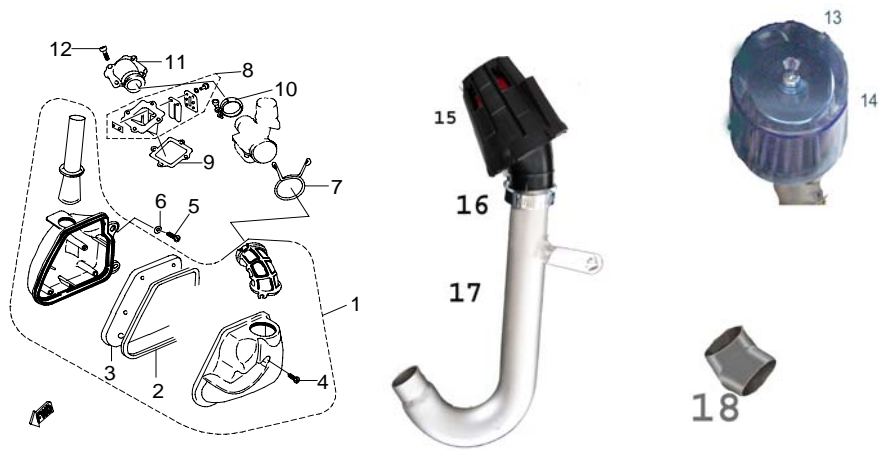

Item	Part No.		Qty
1	17300-E01-000	Air Cleaner Ass'y	1
2	17311-E01-000	Seal	1
3	17320-E01-000	Filter Element, Air Cleaner	1
4	17334-E01-000	Screw, Tapping	3
5	P91760-06020-05W	Hex. Socket Bolt	2
6	P93100-06013-01W	Washer, Plain	2
7	17333-E01-000	Clip	1
8	14710-E01-100	Reed Valve Ass'y	1
9	14711-E01-000	Gasket, Reed Valve	1
10	16422-E01-000	Band, Intake Manifold	1
11	16410-E01-000	Manifold, Intake	1
12	P91760-06020-05W	Hex. Socket Bolt	4
13	17334-E01-00W	Water Shield K&N Style	1
14	17300-P05-000	Air Cleaner With Base K&N	4
15	17300-P50-010	Air Cleaner Assembly	1
16	16422-E01-000	Clamp	1
17	17331-950-000	Duct	1
18	17332-P50-000	Connecting boot carb to duct	1

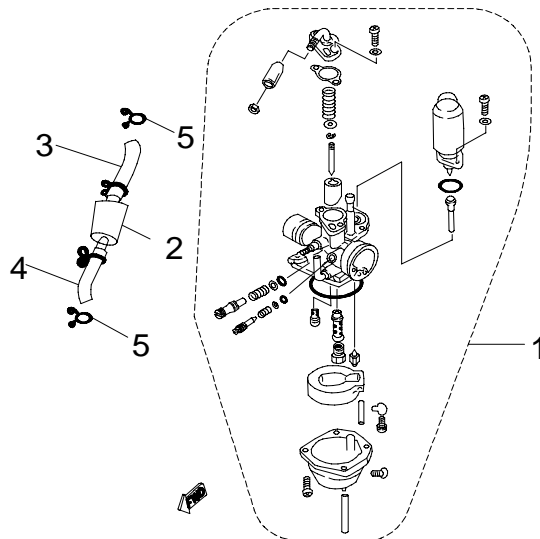 


E-6
Carburetor

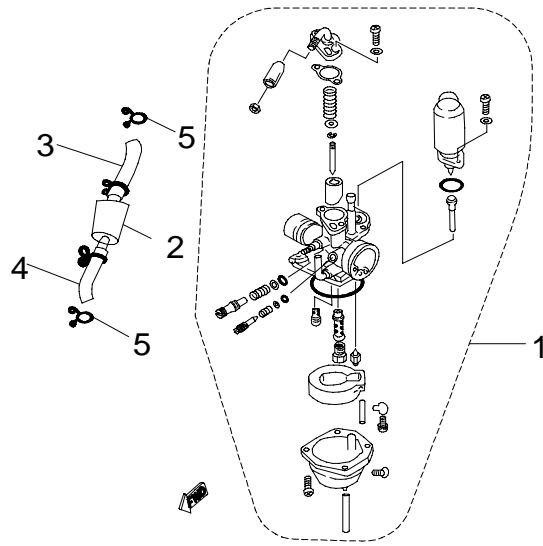 

Item	Part No.		Q'ty
1	16100-E03-030	Carburetor Ass'y	1
2	16300-E01-000	Filter, Fuel	1
3	16310-06135	Tube A , Fuel	1
4	16310-06070	Tube , Fuel	1
5	97410-E01-000	Clip, Tube	4

E-7

 
Crankcase

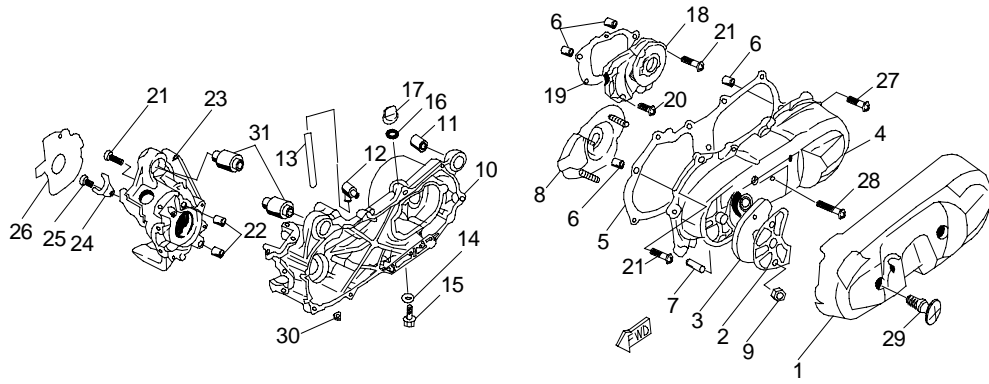

Item	Part No.		Q'ty
1	11341-E01-000	Protector, L. Crankcase Cover	1
2	11342-E01-000	Guide, Air Filter	1
3	11343-E01-000	Filter Element, L. Crankcase	1
4	11340-E01-000	Cover, L. Crankcase	1
5	11395-E01-001	Gasket, L. Crankcase	1
6	94001-081014	Pin, Dowel	4
7	11344-E01-000	Shaft	1
8	11345-E01-000	Fixed Plate, Filter Element	1
9	P92120-06-10C	Hex. Acorn Washer Face	3
10	11200-E01-000	Crankcase, L.	1
11	93507-082021	Bush	1
12	11210-E01-000	Breather	1
13	11211-E01-000	Hose,Breather	1
14	P93101-E01-000	Washer, Copper	1
15	91700-08012-12G	Hex Waser Face Bolt	1
16	96200-138024	O-Ring	1
17	11212-E01-000	Plug, Oil	1
18	11400-E01-000	Cover, Transmission	1
19	11410-E01-000	Gasket, Transmission	1
20	P91760-06020-05W	Hex. Socket Bolt	3
21	P91760-06035-05W	Hex. Socket Bolt	10
22	94001-101216	Pin, Dowel	2
23	11100-E01-000	Crankcase, R.	1
24	11110-E01-000	Holder	1
25	P91760-06010-05W	Hex. Socket Bolt	1
26	31121-E01-000	Gasket, A.C.G	1
27	P91760-06025-05W	Hex. Socket Bolt	8
28	P91760-06065-05W	Hex. Socket Bolt	1
29	11346-E01-000	Bolt, Special	2
30	17110-E01-000	Grommet	2
31	93506-123538	Bush	2

E-8

 
Starter

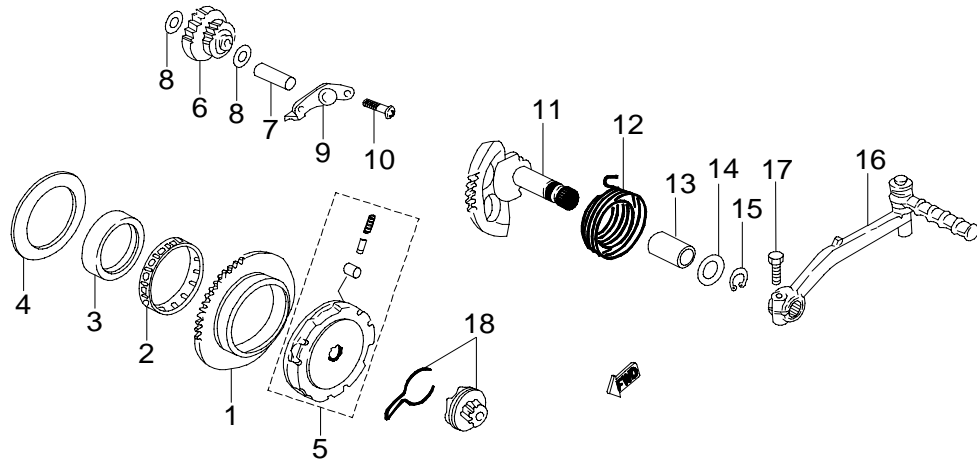

Item	Part No.		Qty
1	22110-E01-100	Wheel, Starter	1
2	95200-555912	Bearing, Needle	1
3	11213-E01-000	Boss	1
4	P93100-55076-05B	Washer, Plate	1
5	22100-E03-000	Wheel, Starter	1
6	22120-E01-000	Idle Gear Ass'y	1
7	11344-E01-000	Shaft	1
8	P93100-08216-02C	Washer, Plate	2
9	22121-E01-000	Plate, Idle Gear	1
10	P91760-06010-05W	Hex. Socket Bolt	2
11	28211-E01-100	Kick Shaft Ass'y	1
12	28261-E01-000	Spring, Torsion	1
13	28251-E01-000	Bush, Kick Shaft	1
14	P93100-15228-01C	Washer, Plate	1
15	93406-STW15	Circlip	1
16	16105-A01-000	Kick Ass'y	1
17	P91770-06025-10C	Hex. Bolt	1
18	28221-E01-100	Kick Pinion Ass'y	1


E-9

 Clutch

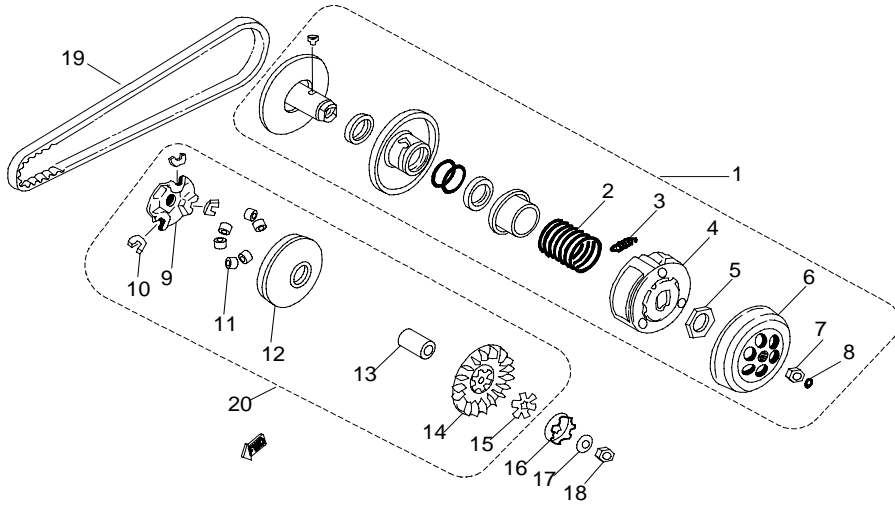


Item	Part No.		Q'ty
1	22300-E01-010	Secondary Sheave Ass'y	1
2	22312-E01-000	Spring, Compression	1
3	22331-E01-000	Spring, Clutch	3
4	22330-P70-000	Carrier Ass'y, Clutch	1
5	22332-E01-000	Nut, Clutch	1
6	22340-E03-000	House, Clutch	1
7	P92111-E01-000	Hex. Acorn Nut	1
8	96200-125030	O-Ring	1
9	22411-E01-000	Plate, Cam	1
10	22412-E01-000	Slider, Cam Plate	3
11	22413-P70-010	Weight Roller	6
12	22410-E01-000	Sliding Sheave, Primary	1
13	22414-E01-001	Collar	1
14	22420-E01-000	Fixed Sheave, Primary	1
15	22421-E01-000	Waser, Clam	1
16	22422-E01-000	Clutch, Oneway	1
17	P93103-E01-000	Washer, Conical Spring	1
18	P92110-10-17C	Hex. Acorn Nut	1
19	22500-E01-000	Belt, Drive	1
20	22400-E03-000	Sliding Sheave, Ass'y	1

 **E-10
Transmission**

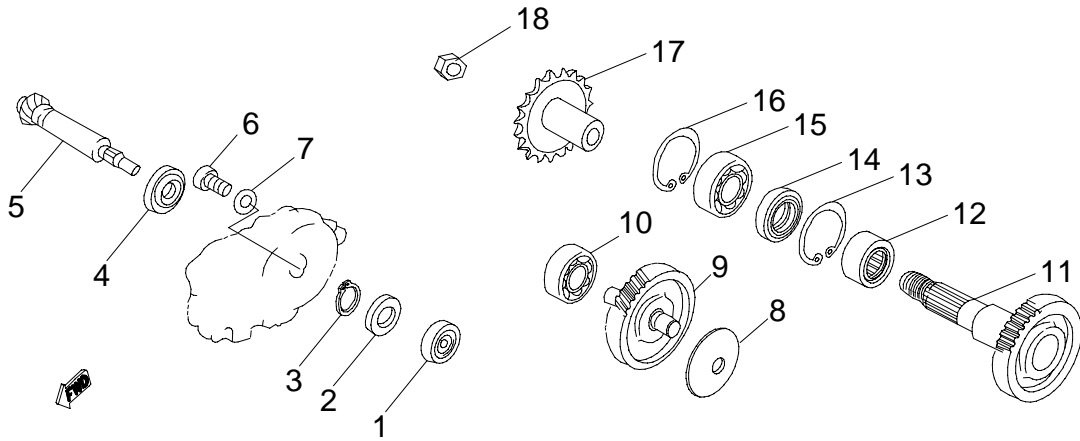


Item	Part No.		Q'ty
1	95100-638RD	Bearing, Ball	1
2	96100-172855	Seal, Oil	1
3	93406-STW17	Circlip	1
4	95100-T6003	Bearing,Ball	1
5	23610-E01-000	Drive Gear, Primary	1
6	P91760-06010-05W	Hex. Socket Bolt	1
7	P93100-06519-12W	Waser, Plate	1
8	P93104-E01-000	Washer, Conical Spring	1
9	23620-E01-000	Main Axle Comp	1
10	95100-T6201	Bearing,Ball	1
11	23630-E01-000	Gear, Driven	1
12	95200-HMK2515-1	Bearing,Needle	1
13	93405-IRTW32	Circlip	1
14	96100-253506	Seal, Oil	1
15	95100-6004LLU	Bearing, Ball	1
16	93405-RTW42	Circlip	1
17	23801-E01-000	Sprocket, Drive	1
18	92130-14S-19G	Nut, Insert Lock	1

 **E-11
Generator**

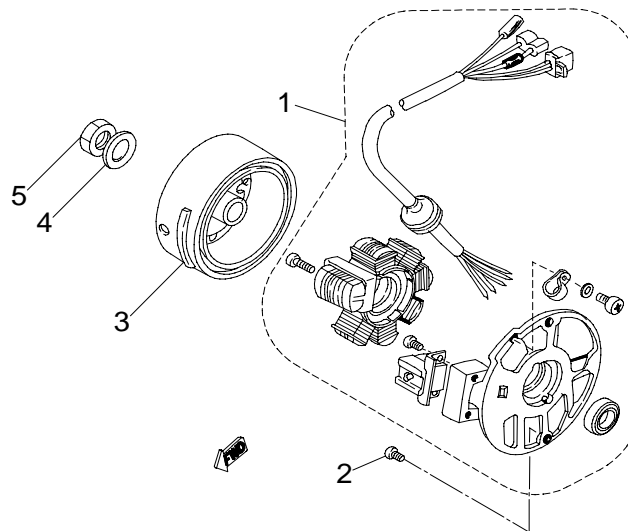


Item	Part No.		Q'ty
1	31120-E03-000	Base Ass'y, Generator	1
2	P91760-06016-05W	Hex. Socket Bolt	2
3	31100-E03-000	Wheel, Fly	1
4	P93100-10022-20C	Washer, Plate	1
5	P92110-10-17C	Hex. Acorn Nut	1

 E-12
Start Motor

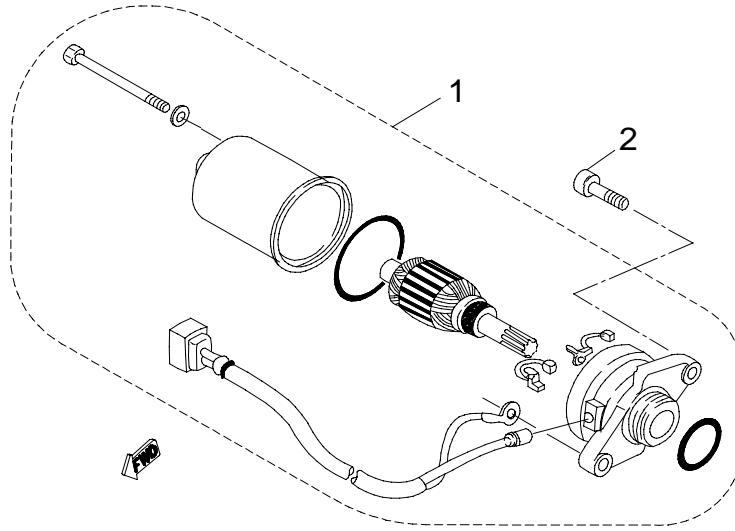

Item	Part No.		Q'ty
1	31200-E01-000	Starting Motor Ass'y	1
2	P91760-06020-05W	Hex. Socket Bolt	2

 
E-13
Crankcase Bracket

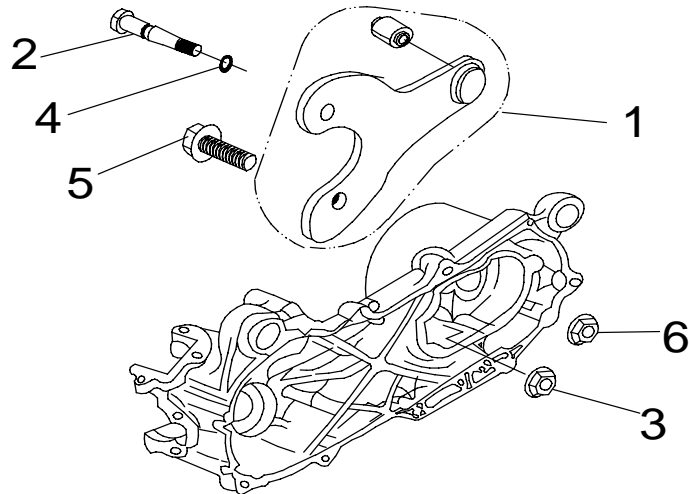

Item	Part No.		Q'ty
1	11347-E01-000	Bracket, Crankcase	1
2	11348-E01-000	Shaft, Fix	1
3	92130-08S-14G	Nut, Insert Lock	1
4	96200-075015	O-Ring	1
5	P92100-12040-14C	Hex. Bolt, Flange	1
6	P92120-12-14C	Hex. Acorn Nut, Flange	1

F-1

 
Exhaust Pipe

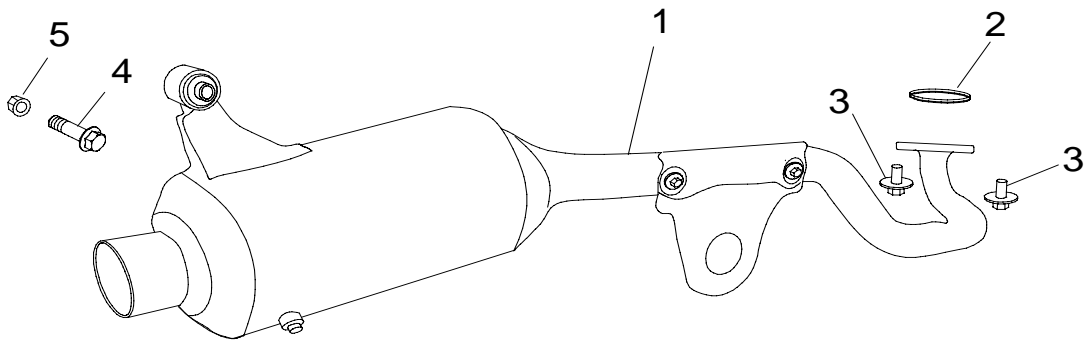

Item	Part No.			Qty
1	12160-P70-010		Exhaust Pipe	1
2	12161-A01-000		Washer, Muffler	1
3	91811-A01-000		Bolt, Crosshead, Flange	2
4	91700-10040-14G		Hex. Bolt, Flange	1
5	92130-10S-14G		Nut, Insert Lock	1

F-2

 
Frame

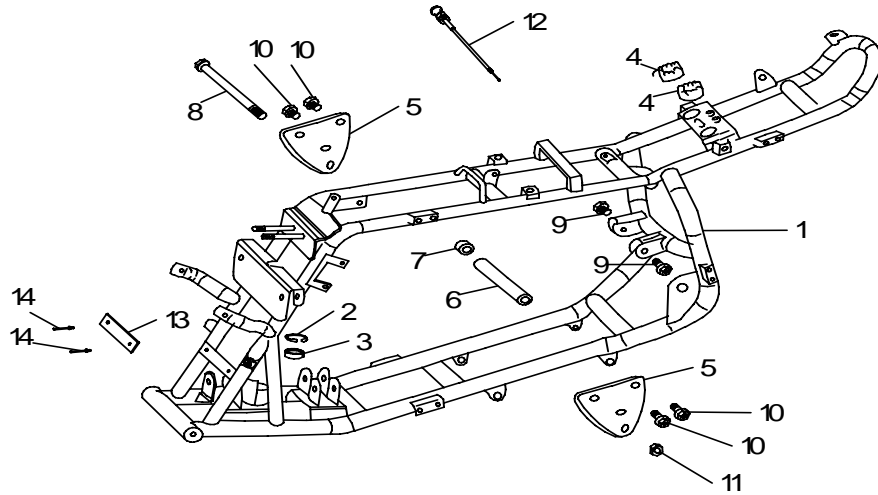

Item	Part No.		Qty
1	71000-A01-00F	Chassis	1
2	93405-IRTW32	Circlip	1
3	95100-B6002 2RS	Bearing	1
4	93205-A01-000	Couhshion, Seat	2
5	71205-A01-000	Engine Holder Seat	2
6	93305-A01-000	Collar (andoised)	1
7	93310-A01-000	Collar(andoised)	1
8	91700-12220-14G	Blot Flange	1
9	91710-08035-12G	Hex Washer Face Bolt	2
10	91700-08012-12G	Hex Waser Face Bolt	4
11	92130-12S-17G	Nut, Insert Lock	1
12	31220-A01-011	Cable, Throttle	1
13	91835-A01-000	Stud, Warning Plate	2
14	91760-06012-05G	Hex. Screw, Socket	2

F-3

 
A Arm, Footrest

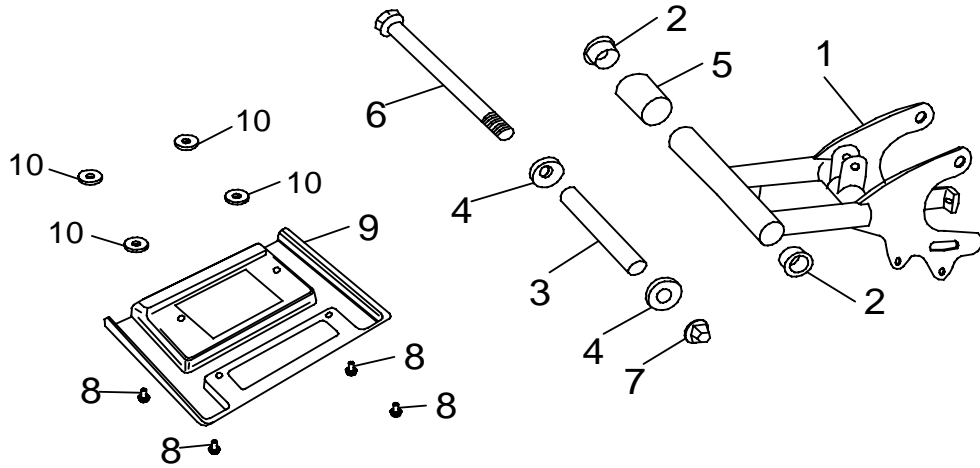

Item	Part No.		Qty
1	82105-A01-00A	Fork, Rear	1
2	95305-A01-000	Bushing Contain Oil	2
3	93315-A01-000	Spacer Tube, Rear-fork	1
4	93105-A01-100	Seal cover,swing Arm	2
5	93210-A01-000	Rubber Sleeve	1
6	91700-14290-19G	Bolt, Flange	1
7	92130-14S-19G	Nut, Insert Lock	1
8	91700-08012-12G	Bolt, Flange	8
9	71215-A01-000	Footrest Assy	2
10	93215-A01-000	Rubber Mate	8

F-4

 
Fend Bur, Rocker Arm

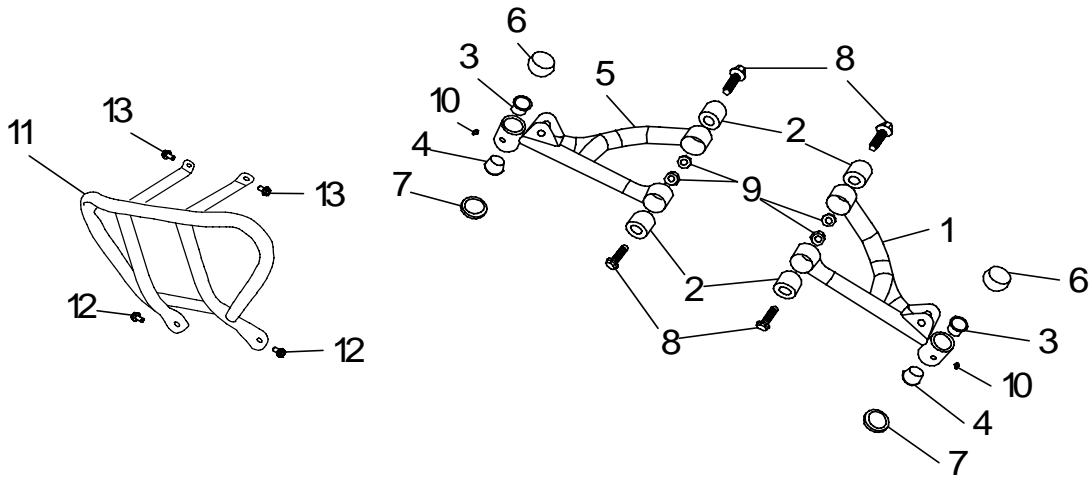

Item	Part No.		Qty
1	81105-A02-000	A. Arm, Left	1
2	93505-A01-100	Bush	4
3	95310-A01-000	Bush, Contion Oil, Top	2
4	95315-A01-000	Bush, Contion oil, Bottom	2
5	81110-A02-000	A Arm, Right	1
6	93605-A01-000	Waterproof Rubber	2
7	93610-A01-000	Dustproof Rubber	2
8	91700-10048-14G	Bolt, Flange	4
9	92130-10S-14G	Nut, Insert Lock	4
10	91805-A01-000	Grease Valve	2
11	71211-A01-00B	Front Bumper	1
12	91700-08012-12G	Hex Waser Face Bolt	2
13	91750-06016-10G	Bolt ,Flange	2

F-5

 
Fuel Tank, Oil Tank

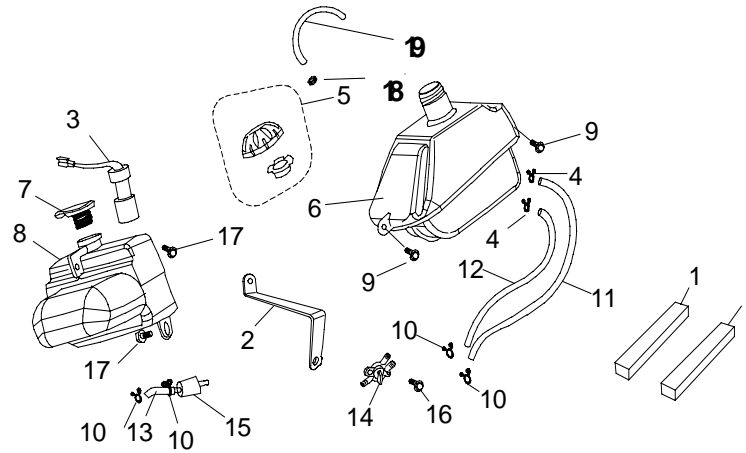

Item	Part No.		Qty
1	12110-A01-000	Sponage	2
2	12220-A01-001	Bracket, Support	1
3	12210-A01-000	Gauge, Oil Level	1
4	97411-A01-000	Clip	2
5	12150-A01-020	Cap Assembly, Fuel tank	1
6	12100-A01-020	Tank, Fuel	1
7	12205-A01-001	Cap, Oil Tank	1
8	12200-A01-001	Tank, Oil	1
9	91750-06016-10G	Bolt ,Flange	2
10	97410-A01-000	Clip, Tube	4
11	12310-A01-001	Tube A , Fuel	1
12	12311-A01-001	Tube B , Fuel	1
13	12317-A01-011	Tube,Oil	1
14	12105-A01-000	Valve, Fuel	1
15	12215-A01-000	Oil Filter	1
16	91700-06012-10G	Hex. Bolt, Flange	1
17	91821-A01-000	Bolt, Hex Ladder(Short)	2
18	12153-A01-100	Spring	1
19	12151-A01-001	Hose, Breather (300mm)	1

F-6

 
Shock Absorber, Lamp

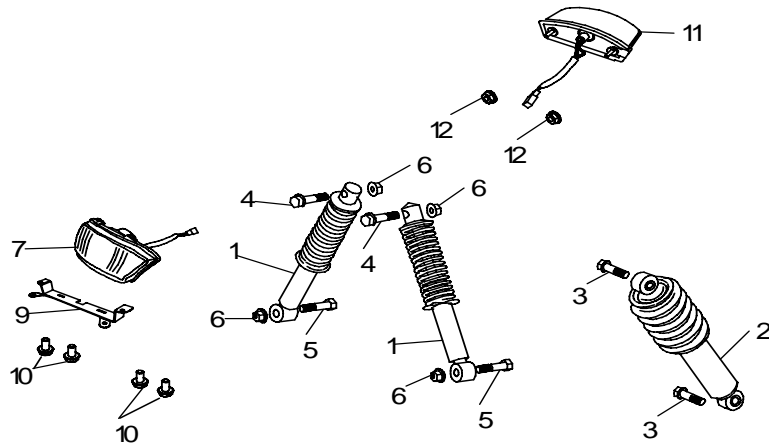

Item	Part No.		Qty
1	81200-A01-200	Shock Absorber, Front	2
2	82200-A01-00A	Shock Absorber , Reae	1
3	91710-10038-14G	Hex. Bolt, Flange	2
4	91700-10040-14G	Hex. Bolt, Flange	2
5	91770-10038-14G	Hex. Blot	2
6	92130-10S-14G	Nut, Insert Lock	4
7	62205-A01-000	Head Lamp Comp	1
9	62206-A01-000	Head Lamp Bracket	1
10	91825-A01-010	Philips Screw, Tapping	4
11	62210-A01-000	Tail Light Comp	1
12	92130-06S-10G	Nut, Self-Locking	2

F-7

 
Front Tire

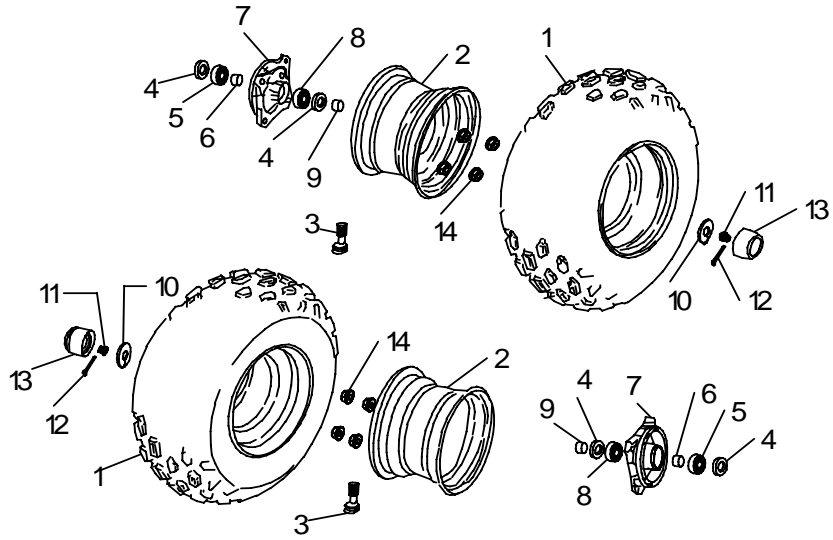

Item	Part No.		Qty
1	24107-A01-000	Tire (KENDA K530F) 16*8*7	2
2	24207-A01-100	Rim 7*5.2	2
3	24106-A01-000	Valve, Tire	2
4	96100-223507A	Seal, Oil	4
5	95100-B6003 2RS	Bearing	2
6	93325-A01-100	Spacer, Inner	2
7	31105-A01-000	Drum Brake, Front	2
8	95100-B6002 2RS	Bearing	2
9	93320-A01-100	Spacer, Outer	2
10	93100-12540-45G	Washer, Plate	2
11	92140-12-17G	Nut, Insert Lock	2
12	94000-03032	Cotter pin	2
13	93615-A01-000	Cap, Rubber	2
14	92130-10S-14G	Nut, Insert Lock	8

F-8

 
Rear Tire

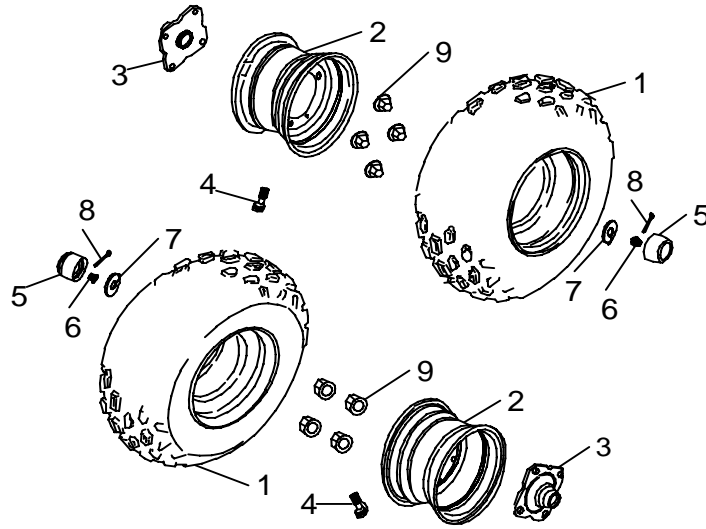

Item	Part No.		Qty
1	24107-A01-000	Tire (KENDA K530F) 16*8*7	2
2	24207-A01-100	Rim 7*5.2	2
3	23105-A01-010	Fixed bracket , Rim , Rear	2
4	24106-A01-000	Valve, Tire	2
5	93615-A01-000	Cap, Rubber	2
6	92140-14-19G	Nut, Insert Lock	2
7	93100-14540-45G	Washer, Plate	2
8	94000-03032	Cotter pin	2
9	92130-10S-14G	Nut, Insert Lock	8

F-9

 
Drum Brake, Front

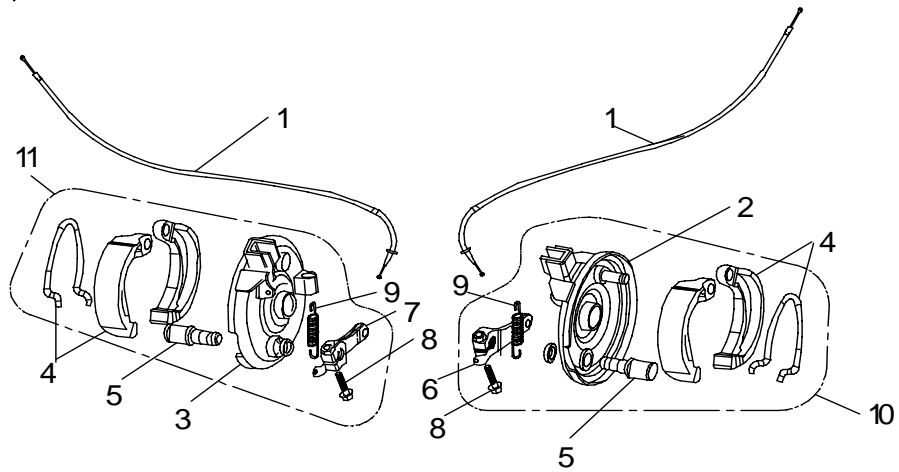

Item	Part No.		Qty
1	31205-A01-001	Cable , Front Brake	2
2	31306-A01-00A	Panel Comp., Front L. Brake	1
3	31311-A01-00A	Panel Comp., Front R. Brake	1
4	31315-A01-000	Brake Shoe, Front	2
5	31320-A01-000	Cam Shaft, Front Brake	2
6	31325-A01-010	Arm, Front L. Brake	1
7	31330-A01-010	Arm, Front R. Brake	1
8	91700-05024-08C	Bolt, Hex. Washer Plate	2
9	97205-A01-000	Return Spring, Front Brake	2
10	31305-A01-011	Panel Comp Ass'y , Front L. Br	1
11	31310-A01-011	Panel Comp Ass'y , Front R. Br	1

F-10

 
Disc Brake System

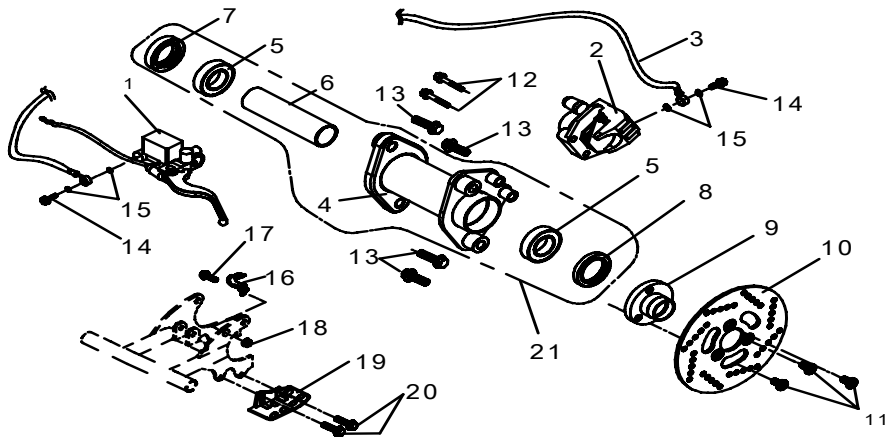

Item	Part No.		Qty
1	31405-A01-000	Lever Ass'y,Left	1
2	31115-A01-000	Rear Disc Caliper	1
3	31225-A01-001	Hose, Rear Disk Brake	1
4	31335-A01-011	Rear Axle Bearing Carrier	1
5	95100-6006ZZ	Bearing	2
6	93330-A01-00A	Spacer	1
7	96100-355511A	Oil Seal	1
8	96100-355507A	Oil Seal	1
9	31355-A01-010	Rear Disc Connector	1
10	31120-A01-000	Rear Brake Disc	1
11	91760-10014-08G	Hex Socket Bolt	3
12	91710-08038-12G	Hex Washer Face Bolt	2
13	91710-12028-17G	Hex Washer Face Bolt	4
14	91830-A01-000	Nut, Brake Hose	2
15	93101-A01-000	Washer, Copper	4
16	83115-A01-000	Clip, Brake Hose	1
17	91700-06016-10G	Hex Washer Face Bolt	1
18	92130-06S-10G	Nut, Self-Locking	1
19	71220-A01-000	Rear Brake Guard	1
20	91700-08012-12G	Hex Waser Face Bolt	2
21	31300-A01-012	Rear Axle Bearing Carrier	1

F-11

 
Handle bar, Lever

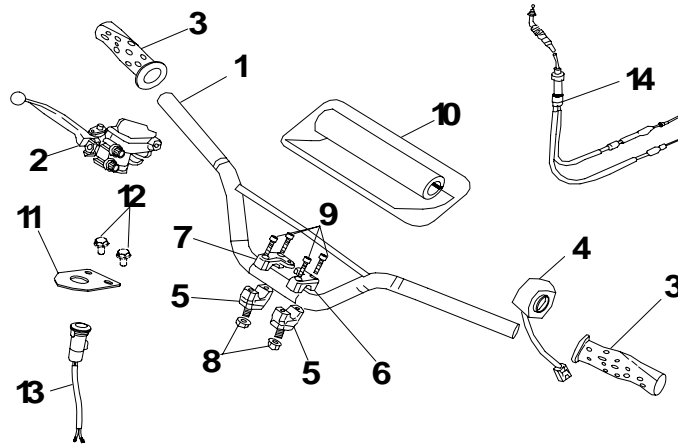

Item	Part No.		Qty
1	51100-A01-010	Handlebar	1
2	31450-A01-020	Lever Ass'y, Right	1
3	51105-A01-000	Grip, Handle(L)	2
4	61100-A01-010	Handle Switch Ass'y, Left	1
5	52105-A01-000	Bottom Clamp, Handlebar	2
6	52110-A01-000	Top Clamp, L. Handlebar	1
7	52115-A01-000	Top Clamp, R. Handlebar	1
8	92130-10S-14G	Nut, Insert Lock	2
9	91760-06025-05G	Screw, Hex. Socket	4
10	51110-A01-010	Pad, Handlebar	1
11	52125-A01-00A	Fixed-bracket, Indicate light	1
12	91760-06012-05G	Hex. Screw, Socket	2
13	62105-A01-00A	Indicator Light, Oil(Red)	1
14	31215-A01-000	Cable, Throttle	1

F-12

 
Rear Axle, Sprocket

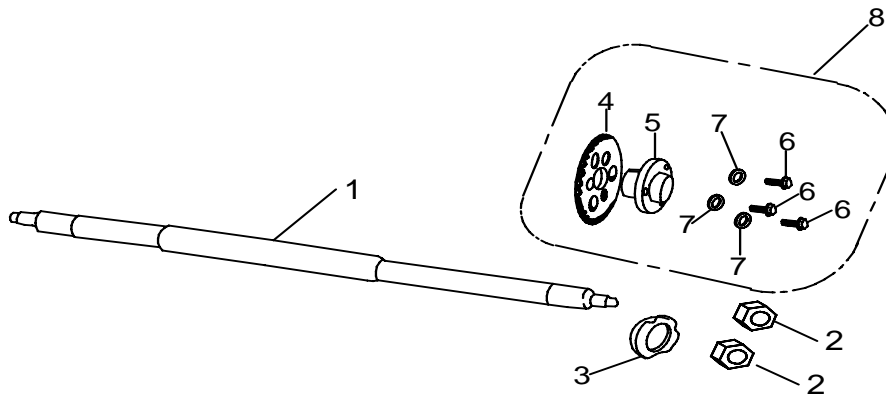

Item	Part No.		Qty
1	23205-A01-040	Wheel Axle, Rear	1
2	P92110-28-36B	Hex. Acorn Nut	2
3	P90430-303801	Washer, Wave	1
4	23305-A01-00A	Sprocket	1
5	23310-A01-000	Sprocket Holder, Driven	1
6	91810-A01-000	Bolt, Hex. Washer Plate	3
7	93103-A01-000	Spring Washer	3
8	23300-A01-00A	Sprocket Ass'y(rear, 428-30T)	1

F-13

 
Chain,Guard

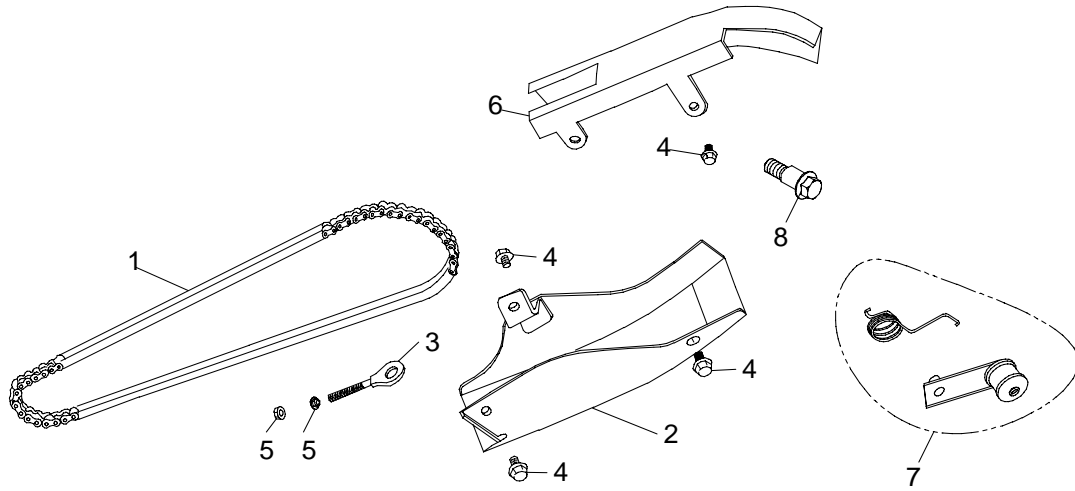

Item	Part No.		Qty
1	23315-NP428H-086	Chain	1
2	71225-A01-000	Guard, Bottom, Chain	1
3	91815-A01-000	Adjuster, Chain	2
4	91700-08012-12G	Hex Washer Face Bolt	4
5	92120-06-10G	Nut, Flange	4
6	71230-A01-100	Guard, Top, Chain	1
7	23320-A01-001	Bracket, Chain	1
8	91823-A01-000	Hex Washer Ladder Bolt	1


F-14

 Steering,Shaft ,Link

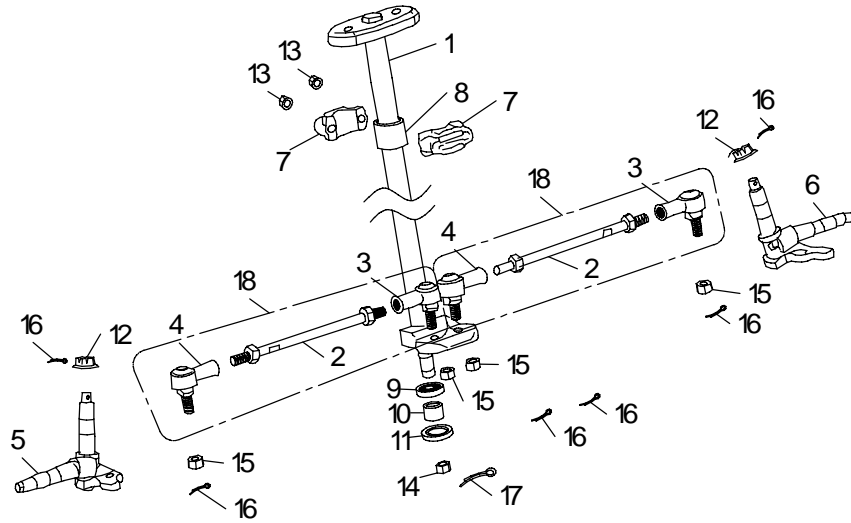

Item	Part No.		Qty
1	52205-A01-000	Steering Shaft Ass'y	1
2	52305-A01-00A	Bolt, Stud	2
3	52310-A01-000	Ball Joint, Left Thread	2
4	52315-A01-000	Ball Joint, Right Thread	2
5	52320-A01-000	Knuckle, L.	1
6	52325-A01-000	Knuckle, R.	1
7	52120-A01-000	Shaft Holder, Steering	2
8	93510-A01-000	Bush, PU	1
9	96100-183207A	Seal , Oil	1
10	93325-A01-100	Spacer, Inner	1
11	96100-223507A	Seal, Oil	1
12	92141-10-14G	Cross Thread Nut	2
13	92130-08S-14G	Nut, Insert Lock	2
14	92130-14S-19G	Nut, Insert Lock	1
15	92130-10S-14G	Nut, Insert Lock	4
16	94000-01620	Cotter pin	6
17	94000-03032	Cotter pin	1
18	52300-A02-00A	Link Ass'y	2

 
F-15
Electronics

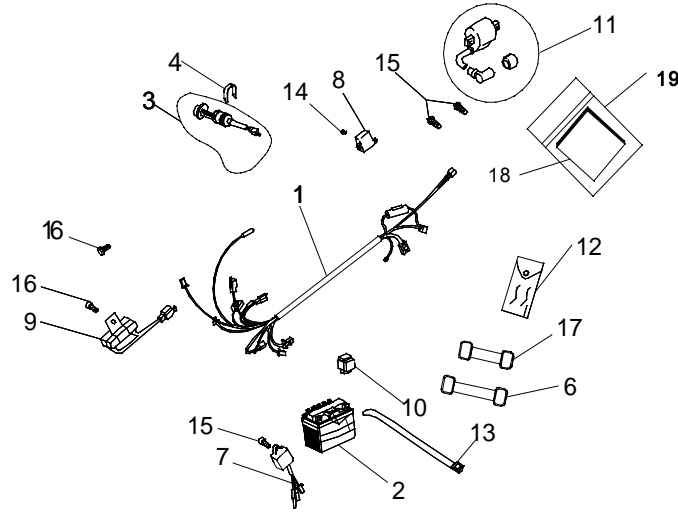

Item	Part No.		Qty
1	63100-A01-002	Main Wire Assy	1
2	63205-A01-00A	Battery	1
3	61105-A01-001	Main Switch	1
4	61107-A01-000	Clip, Main Switch	1
5	91732-06015G	Bolt	2
6	83110-A01-000	Rubber Band, Tool Bag	1
7	61115-A01-010	C.D.I Unit	1
8	61120-A01-000	Rectifier & Regulator	1
9	61125-A01-100	Resistor	1
10	61130-A01-100	Starter Relay	1
11	61109-A01-000	Ignition Coil	1
12	72105-A01-000	Tool Bag	1
13	93705-A01-000	Strap	10
14	91740-05012G	Bolt, Pan Phillips	2
15	91700-06016-10G	Hex Washer Face Bolt	3
16	91700-06012-10G	Hex. Bolt, Flange	1
17	83105-A01-010	Rubber Band, Battery	1
18	72117-A01-010	Owner manual	1
19	97810-A01-000		1

F-16

 Seat, Fender

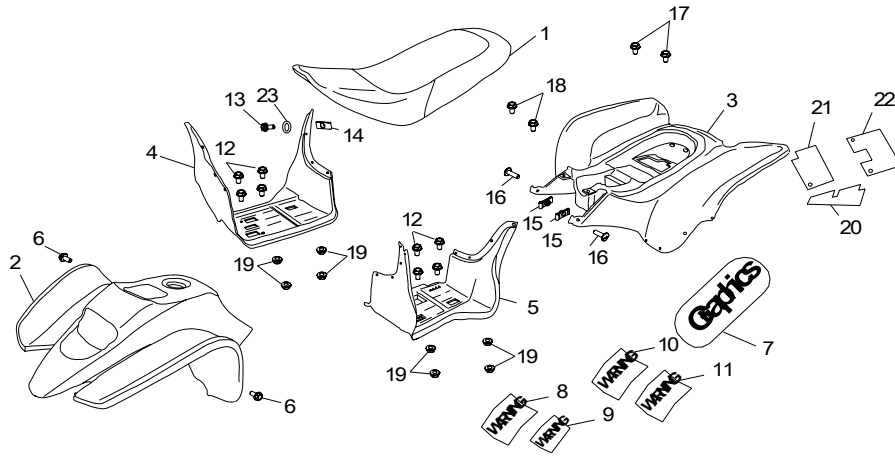

Item	Part No.		Q'ty
1	71305-A01-00B	Seat	1
2	72205-A01-000	Fender, Front(blue)	1
	72205-A01-00A	Fender, Front(Red)	1
	72205-A01-00B	Fender, Front (yellow)	1
	72205-A01-11C	Fender,Front(silver)	1
	72205-A01-00F	Fender,Front(green)	1
3	72210-A01-000	Fender, Rear (blue)	1
	72210-A01-00A	Fender, Rear (Red)	1
	72210-A01-00B	Fender , Rear(yellow)	1
	72210-A01-11C	Febder,Rear(silver)	1
	72210-A01-00F	Febder,Rear(green)	1
4	72215-A01-000	R. Footrest	1
5	72220-A01-000	L. Footrest	1
6	91750-06016-10G	Bolt ,Flange	2
7	72115-A01-060	Label	1
8	72110-A01-060	Label,Warning	1
9	72110-A01-050	Label,Warning	1
10	72110-A01-030	Label,Warning	1
11	72110-A01-040	Label,Warning	1
12	91700-06016-10G	Hex Washer Face Bolt	8
13	91825-A01-00A	Screw, Tapping	16
14	92215-A01-000	U Plate Nut	16
15	92210-A01-000	U Plate Nut(Andoised)	4
16	91765-06018-04S	Hex Socket Bolt	2
17	91821-A01-000	Bolt, Hex Ladder(Short)	2
18	91820-A01-000	Bolt, Hex Ladder(Long)	2
19	92130-06S-10G	Nut, Self-Locking	8
20	72120-A01-000	Heat Cushion(Side)	1
21	72125-A01-000	Heat Cushion(Front)	1
22	72130-A01-000	Heat Cushion(Rear)	1
23	93104-A01-010	Washer, Nylon	16